



# PHR-Series Ceiling Speaker

## User's Guide

### Suspended Ceiling Installation

**1**

Remove the ceiling tile where the speaker is to be installed

**2**


Cut the hole in the tile. See step 1 of the **Frame Construction Ceiling Installation** section on the back.

**3**

Bring the speaker cable through the hole of the cut tile, then reinstall the tile.

**4**

Remove the adjacent tile. Place 2 V-rails and 1 C-ring across the tile where speaker is to be installed. Insert the speaker through the bottom of the hole in the ceiling tile.

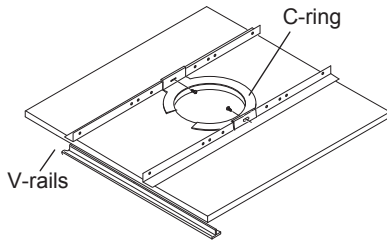

**5**

Connect the wires to the speak terminal clips (see step 2 on the back).

**6**

Loosen the four screws on the front baffle (counter clockwise) 1/2 turn. Then tighten the screws(clockwise) until the dog legs clamp the speaker to the ceiling.

**CAUTION** Do not over-tighten screws!

**7**

Connect a secondary support line from the seismic tab to a secure support point (see step 5 on the back).

**8**


Apply 4 pieces of black putty (supplied), equally spaced 90° apart, to the upper inside edge of the grille (see step 5 on the back).

Install the speaker grille.

### Painting the Speaker Baffle

Cut along the smaller perforated line of the cutout template, marked as paint shield. Push it into the front baffle of the speaker. Paint the front. Remove the paint shield after the paint has dried.

### Application diagram

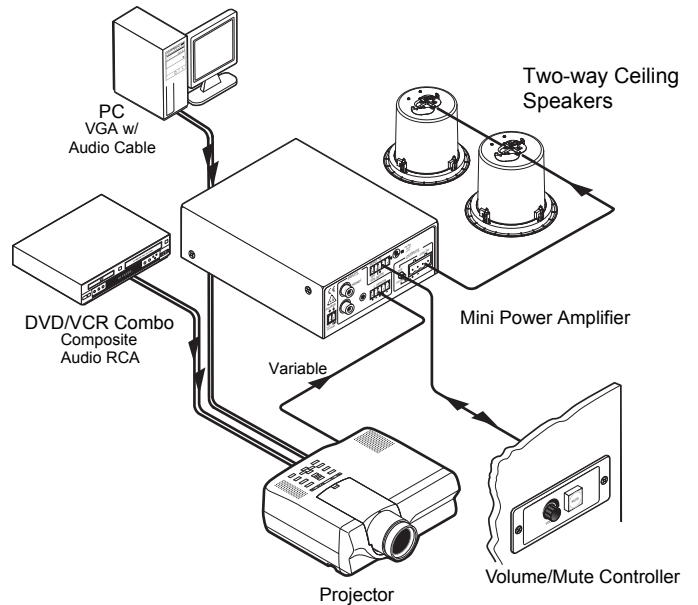

### Packaging

